


ErgoDeck Tiles are modular and easily snap together to cover large areas. For best results, please follow these simple installation instructions.


Each ErgoDeck Tile has six (6) female LockSafe® connectors on two adjacent sides and the corresponding, hidden male LockSafe connectors on the other two sides. This design eliminates the need for additional fasteners, and allows the tiles to be connected on all four sides for a totally flexible layout or floor design.

Step 1. To cover your work area, always align the tiles so that the connectors are positioned in the same direction, as in the example below.

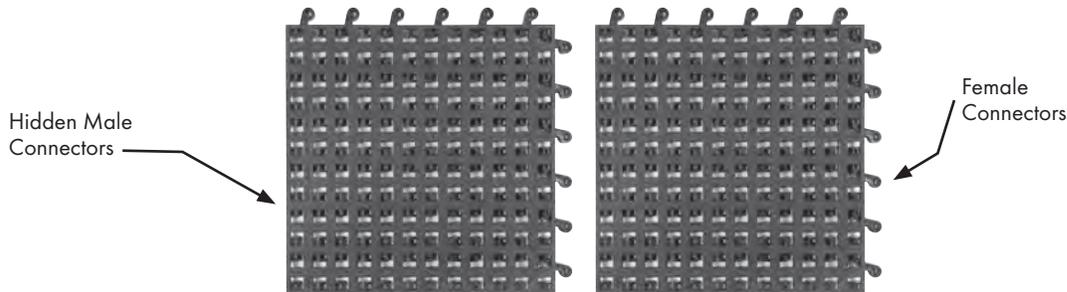


Step 2 (a). Lay the second tile over the first, placing the female side over the male interlocks. Using a rubber mallet, secure the tiles together. Repeat this process completing one row at a time.

(ErgoDeck can be assembled with bare hands, but we do not recommend this method as it increases installation time). When our LockSafe system is totally engaged, the tiles are accurately aligned without gaps creating a neat and clean installation.

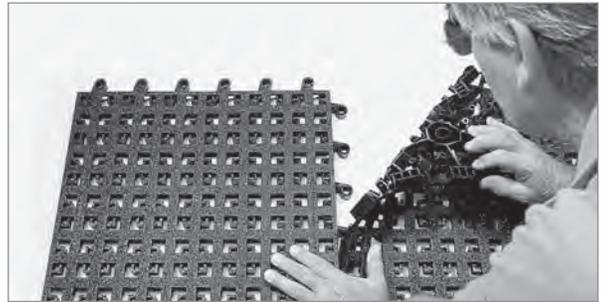


Step 2 (b). ErgoDeck is designed for easy, onsite customization. The tiles can be cut every 3" and still connect. Although, the tiles and ramps can be cut with an industrial shears, if you have multiple tiles to modify, we recommend the use of a band saw or a Skil® saw. These will also insure a straight cut.

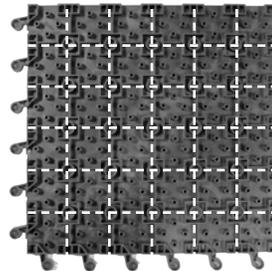

Tiles can be cut every 3" and still connect. For best results, flip the tile upside down. Cut along lines as indicated in the photo. The line equally bisects the circular support. To modify tiles to fit around an object or other impediment, it is not necessary to flip the tile over. Simply measure and cut along the surface.

Step 3 (a). Attach safety ramps to the tiles. If you intend to add corner ramps to your ErgoDeck mat, attach one corner and then add the other ramps from that point. If a corner is used, the ramps bisect the tile connections for increased stability and support. See the photo below.

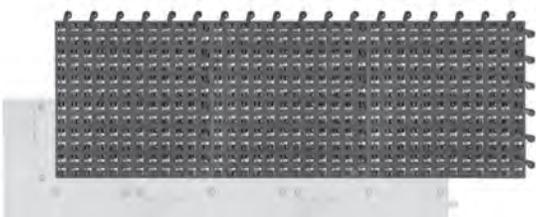

Step 3 (b). Designed for simplicity, the ramps and corners will connect to either the male or female side of an ErgoDeck tile. Manufactured with the female connectors, these ramps immediately "lock" to the male side of an ErgoDeck tile.

To attach the female side of an ErgoDeck tile, simply cut these connectors off with a utility knife. To protect your hands when using a utility knife, always wear leather or Kevlar® gloves. These connectors can also be quickly removed using a Skil® saw.



Step 4. If desired, anchor ErgoDeck to the floor. Outside corners have four (4) and safety ramps have three (3) countersunk holes. This allows the edging to be anchored into the floor creating an installation that will not shift out of place.

Note: The countersunk holes are ¼" in diameter. When anchoring the ramps, we recommend that a washer be used in addition to the appropriate size anchor bolt.

